 


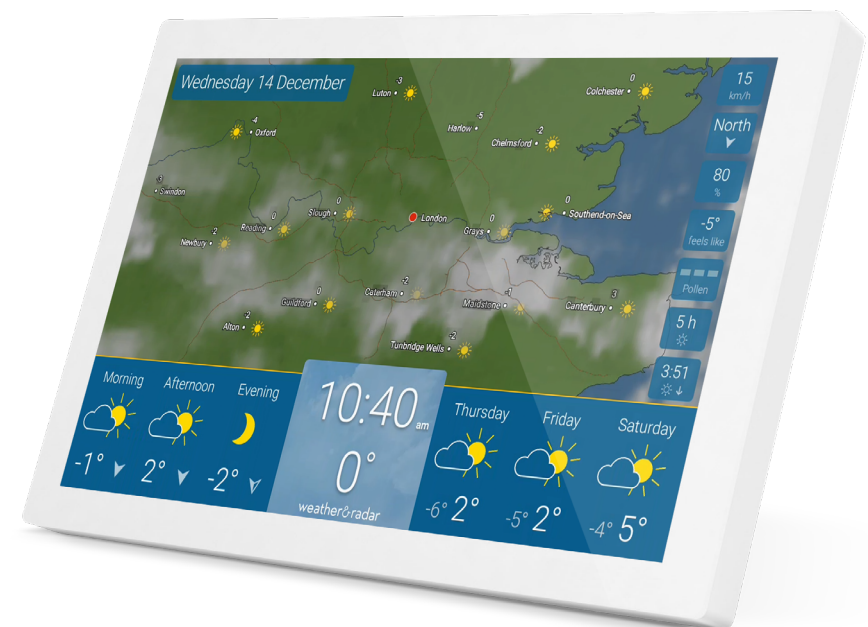

## Inhalt

 
Set Up – Ready to go .....	3
Display – Where is what? .....	4
WeatherRadar .....	4
Weather during the day, current temperature, and WeatherTrend .....	5
Detailed Weather .....	6
14-day weather .....	7
Severe weather warnings .....	8
Settings .....	9
Brightness, zoom function & other settings .....	9
Set screen times .....	10
More weather data .....	11
My location .....	12
Info .....	13
Wi-Fi .....	14
System .....	15
Language & Units .....	16
Standby .....	17
Technical Details .....	18
Reset .....	19
Important notes & contact .....	20



This is how you set up your weather&radar home device.



1. Connect the device to a power outlet.

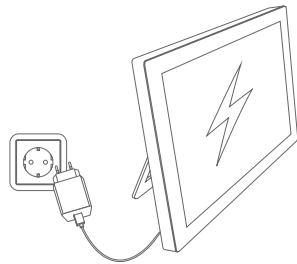

2. Establish a Wi-Fi connection.



3. Automatic localization:  
The weather for your current location is displayed.

Establish a Wi-Fi connection


Automatic localization





### WeatherRadar – Live for the next 90 minutes

The upper part of the screen shows the WeatherRadar for your location.

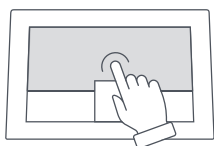


By tapping the map, you start a film that shows the weather's development in the next 90 minutes. Tap again to stop the film.

The WeatherRadar is automatically updated every 5 minutes.

How to use the [zoom function](#) is explained on page 9.


#### WeatherRadar

 The WeatherRadar map shows sun, clouds, precipitation as well as lightning.

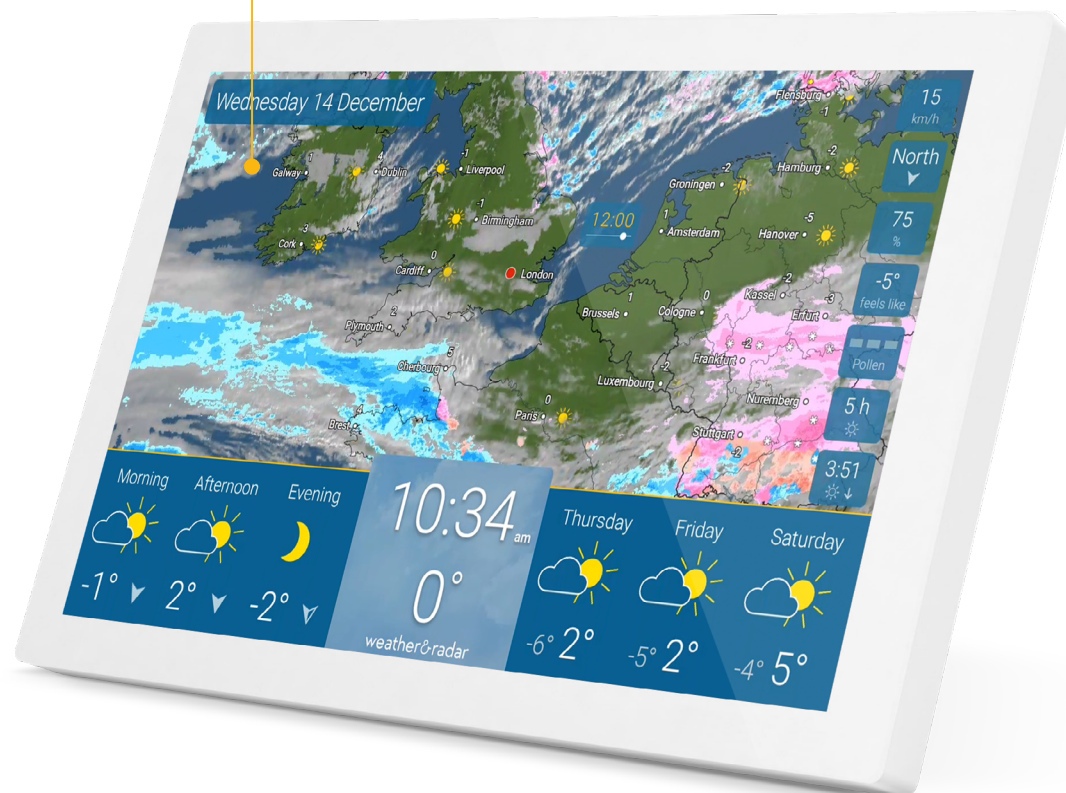

#### Tip

To pause the radar film at any point, tap and hold the radar image.

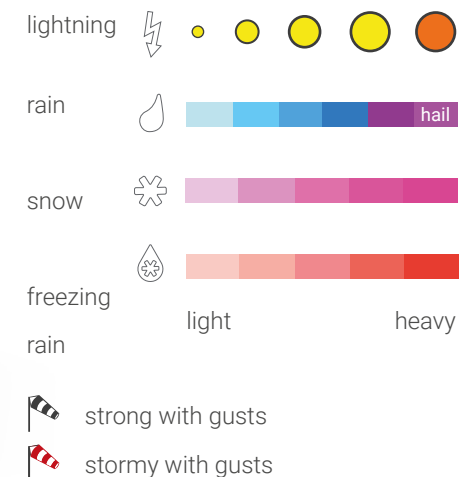



## Weather during the day, current temperature, and WeatherTrend

The lower part of the screen shows the daily weather on the left-hand side and the WeatherTrend of the upcoming days on the right. In the middle of the screen, the current time and temperature are displayed.

**Current temperature and time**  
The time and the current temperature are presented in large letters in the center of the forecast bar. The background image shows the weather of the next hour.

 
### Tip

Click and hold the clock to open the settings.



### Weather today

The forecast for the three following times of the day is indicated in the left section of the forecast bar.

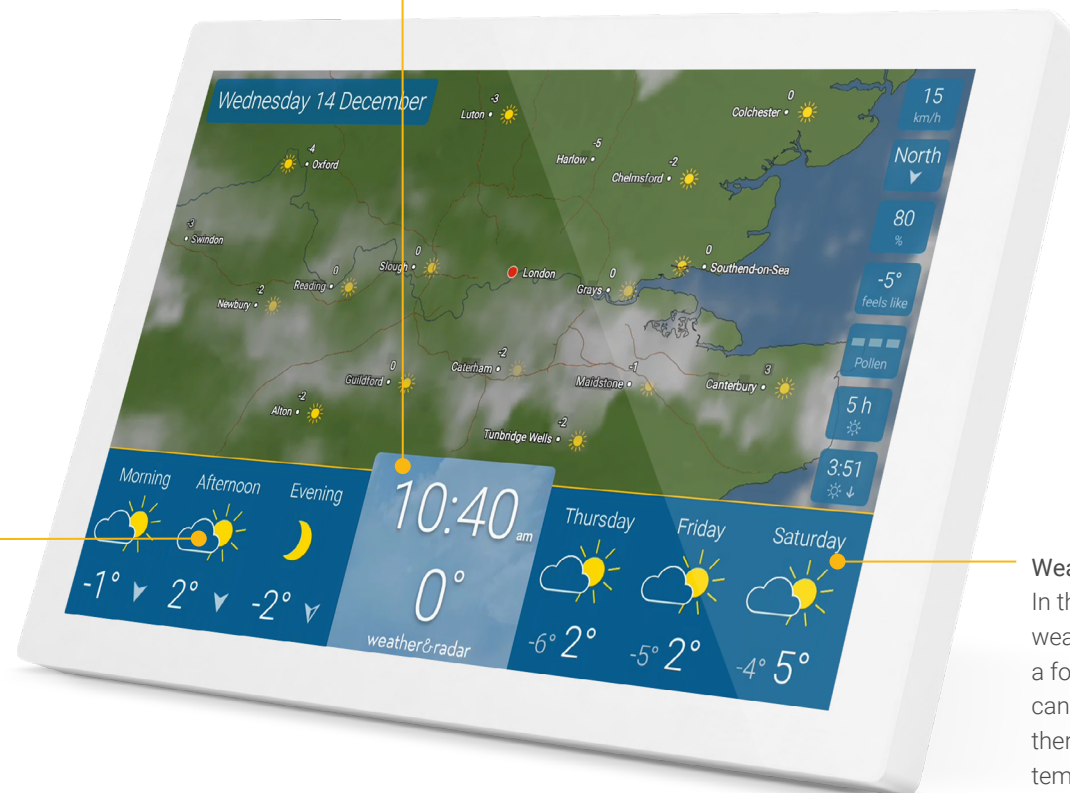

### WeatherTrend

In the right section of the forecast, the weather of the next three days is shown by a forecast symbol. Below the symbol, you can see the expected daily highs. In between, there are the expected nightly minimum temperatures.

## Detailed Weather

### Day weather

When tapping on an individual day, the weather of the day's sections is displayed including sunshine duration, probability of rain, and, if applicable, rain duration and amount.

### Hourly weather

Tap on an individual day segment to see the hourly forecast including temperature and wind.

### Tip

Navigate through different views by swiping left or right.



## 14-day weather


By pressing 'Trend'– in the top right corner of the hourly or daily forecast – you see the projected weather and temperature development for the next 14 days.

14-day weather



### Tip

Swipe from right to left over the three forecast days on the home screen to quickly access the 14-day trend.

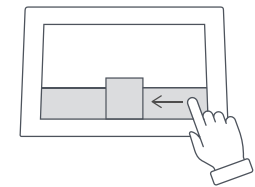





























## Severe weather warnings for thunderstorms, storms, icy roads, and rain

 
In the event of impending severe weather, a severe weather warning is displayed in the top left part of the screen. Depending on the severity of the inclement weather, an additional warning symbol appears.



- lightning      
- rain       
- snow     
- freezing      
  - light
  - heavy
-  strong with gusts
-  stormy with gusts

## Brightness, zoom function & other settings

When tapping the center of the forecast bar, a brightness slider appears on the bottom left side, the regulator for the weather&radar zoom function in the center, and advanced settings at the bottom right side of the screen.

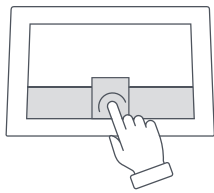

The brightness of the screen is automatically turned down after sunset.


Die Bildschirmhelligkeit wird nach Sonnenuntergang automatisch heruntergeregelt.

### Zoom function

To adjust the scale of the WeatherRadar, use the + and - buttons or the slider.

### Tip

Swipe left or right on the map to play the weather clip forwards or backwards.

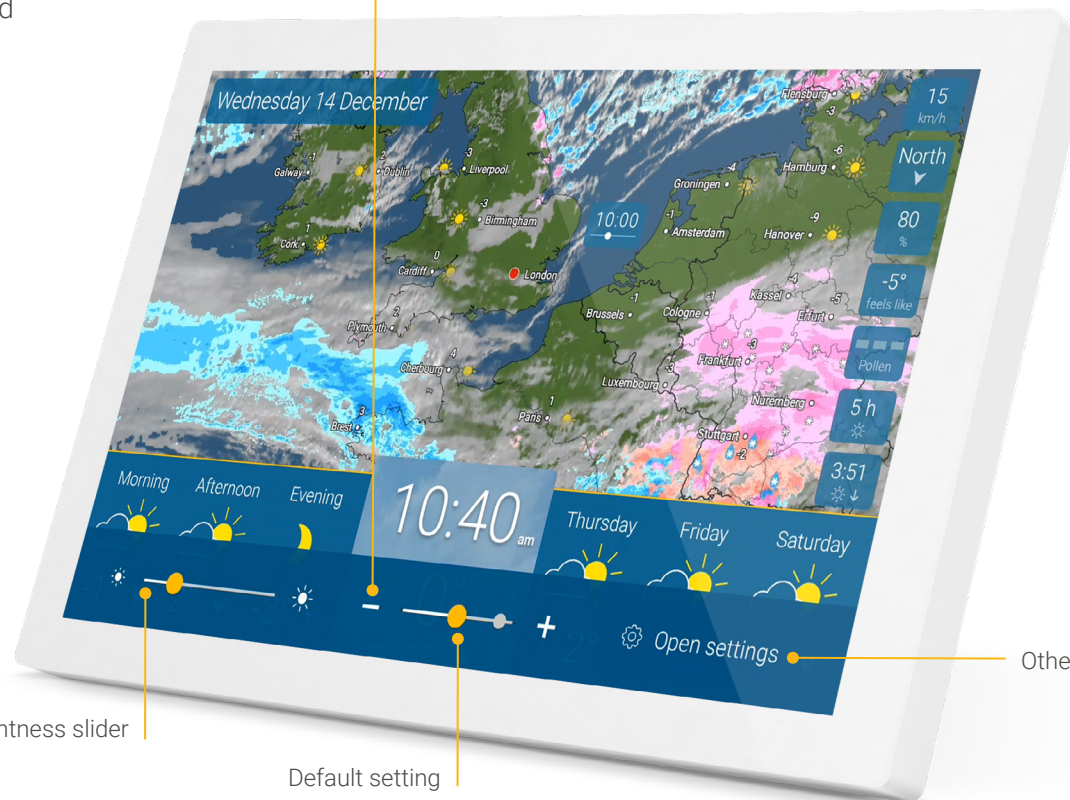

## Set screen times

Under the item 'Display' in the settings menu, you can set specific times at which the device should be on Standby or be active. Times can also be set for different days. You can define your own rules for this.

The default operating time of the device is from 6 am to 11 pm.

### Tip

Days can also be selected or deselected in the overview.





## More weather data

Here you can select the indication of additional weather information besides the WeatherRadar.

### Current values

- wind speed and gusts
- wind direction
- relative humidity
- air pressure incl. tendency
- 'Feels like' temperature

### Daily values

- pollen count
- UV index
- sunrise/sunset times
- moon phases
- sunshine hours



### Tip

Tap on **sunrise** or **sunset** to see the respective other event.



Select additional weather data

Additional weather data on display

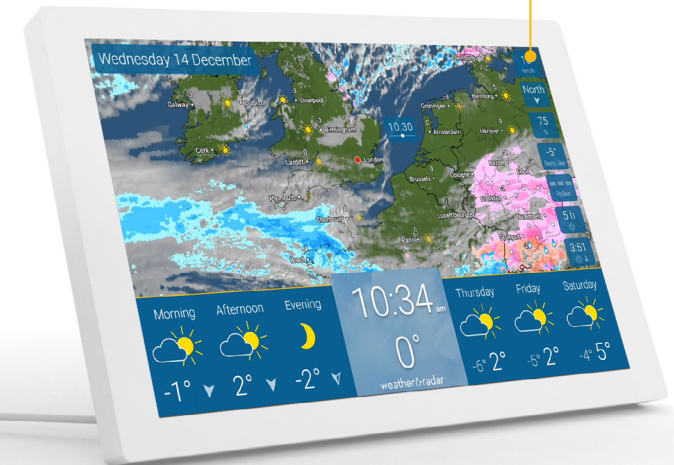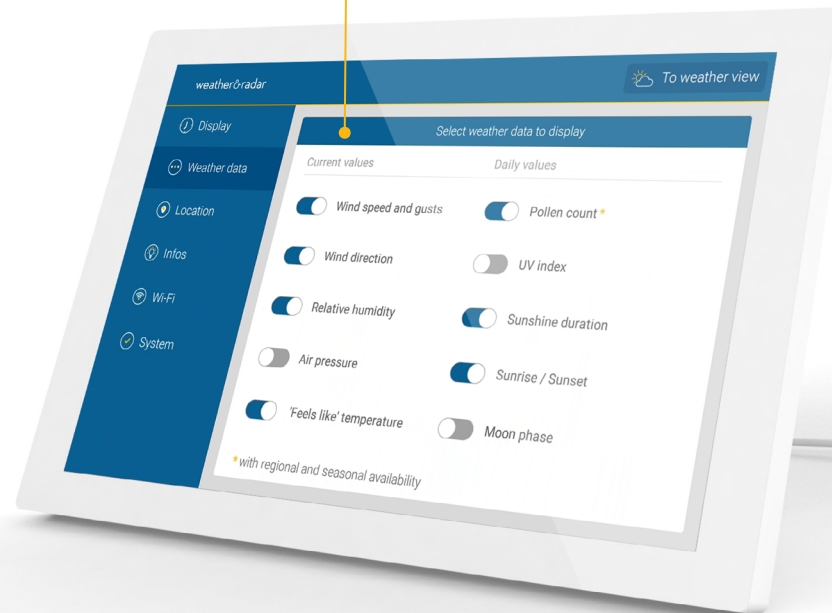

## My location

When starting the device, your location is automatically determined. Optionally, you can specify a different location for the WeatherRadar and the weather data under the menu item 'Location'.

The last three searched locations are shown below the search bar. Click and hold to remove them from your view. You can also always turn back on automatic localization in this menu.

Enter a location



 
### Tip

By tapping on the red dot in the center of the WeatherRadar you are forwarded to 'Location' much faster.

## Info

By tapping on the menu item 'Infos', the weather legend appears on the right.

Besides, you are directed to a short introduction tour that shows you all the basic functions of the device.

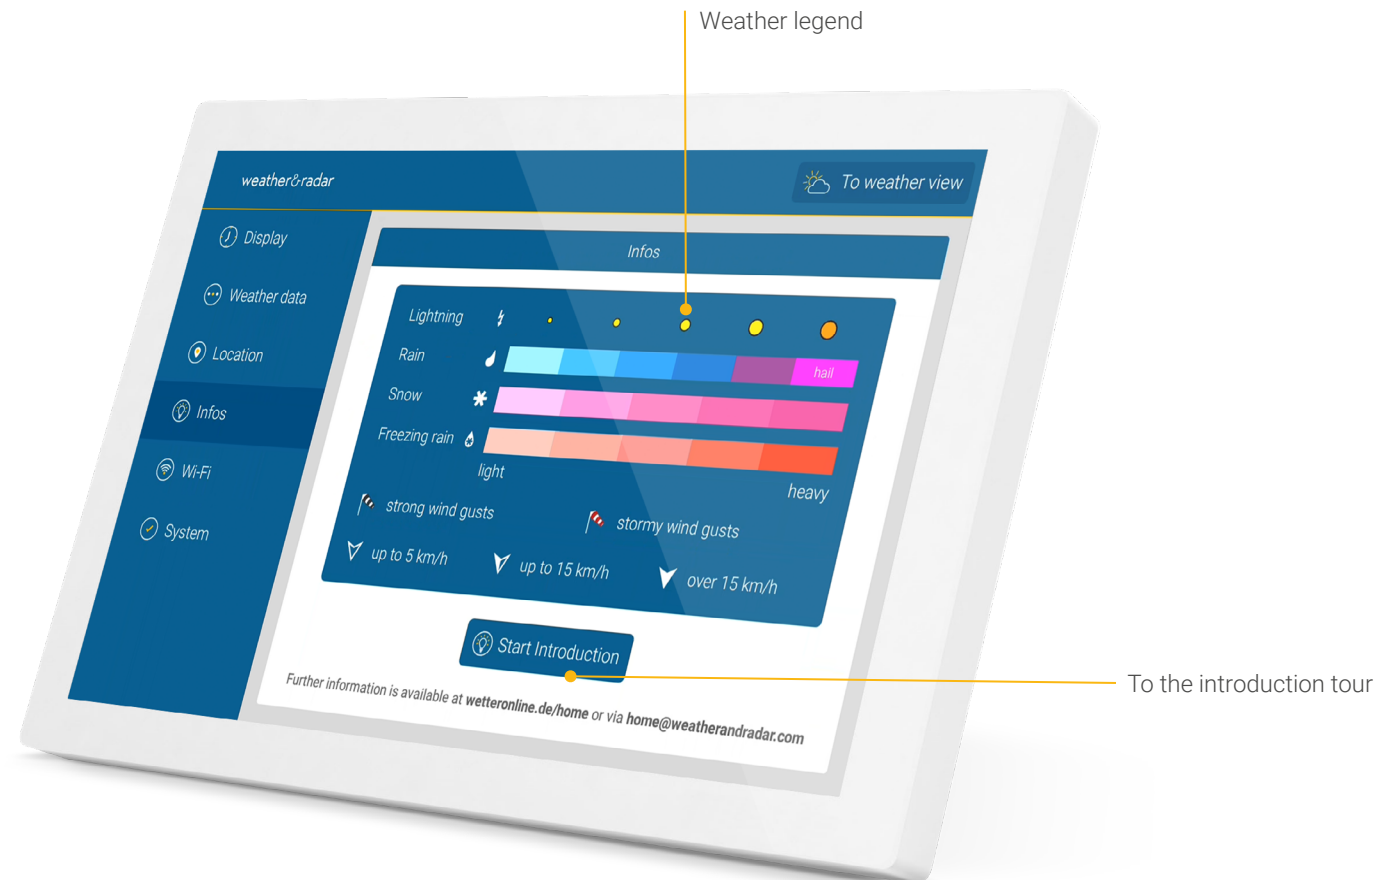



## Wi-Fi

During the initial setup of your device, you are automatically asked to establish a connection to the internet. You can change this any time under the menu item 'Wi-Fi'.

### First aid for Wi-Fi connection

- Briefly disconnect your router and restart your device. Attention! It must be a 2,4 GHz network.
- If issues persist: Connect your device with a guest Wi-Fi network or a mobile phone hotspot.
- Please check if the latest software is installed on your device. Tap on 'System' in the settings and then on the version number.

### Tip


Visit our **help section** by tapping a Wi-Fi network in the list and then the **help button**.



## System

This menu point contains system-relevant information and functions, such as the current software version, the MAC address of the device, data privacy information as well as the option to restart or reset the device.

Have a look at our protocol in the menu item 'Changelog' to stay informed about the latest features and improvements.

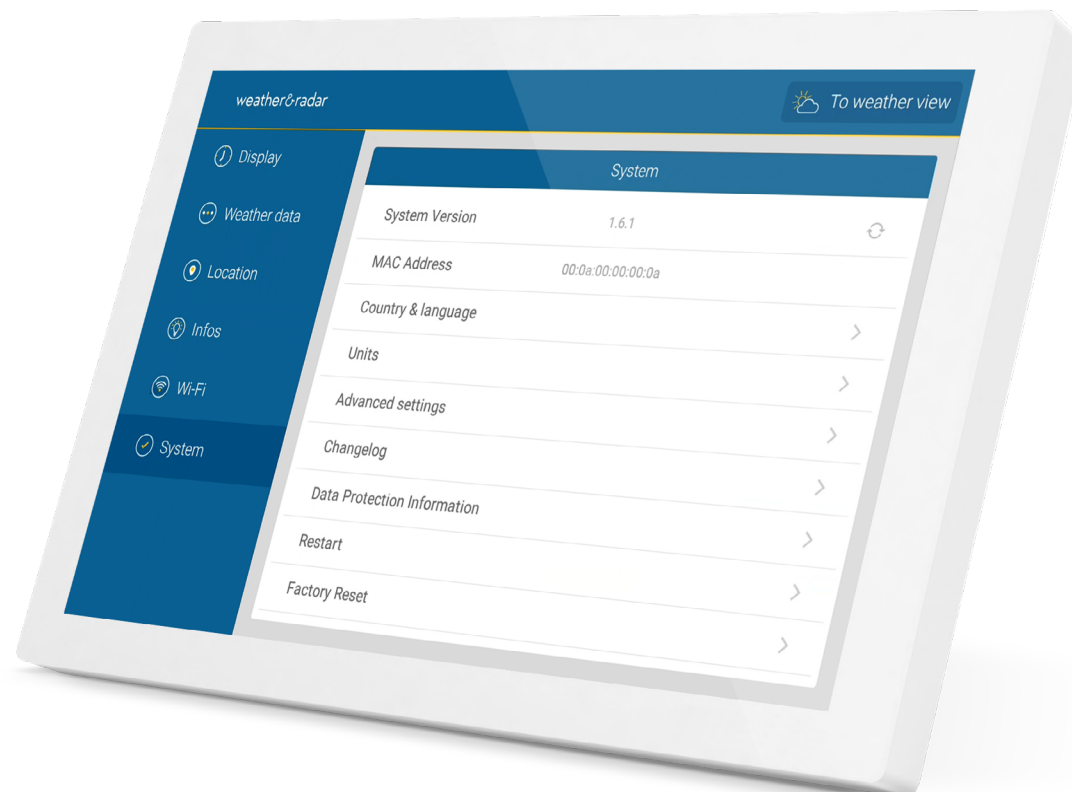

## Language & Units

Select the country and the display language in which you want to use the weather&radar device under the menu point 'System'. These settings affect the appearance and the units used.

 
Under the menu item 'set units' you can further adjust the display to your needs:

- the indication of the time (12- or 24-hour format)
- temperature units (degrees Celsius or Fahrenheit)
- for distances and speed (metric or imperial)
- wind speed units (km/h, m/s, kn, Bft, mph).

Moreover, you can select if the weather clip should show only the forecast for the next hours or include the past hours.

### Tip


Furthermore, you can show or hide current temperatures for locations shown on the weather map (see page 4).

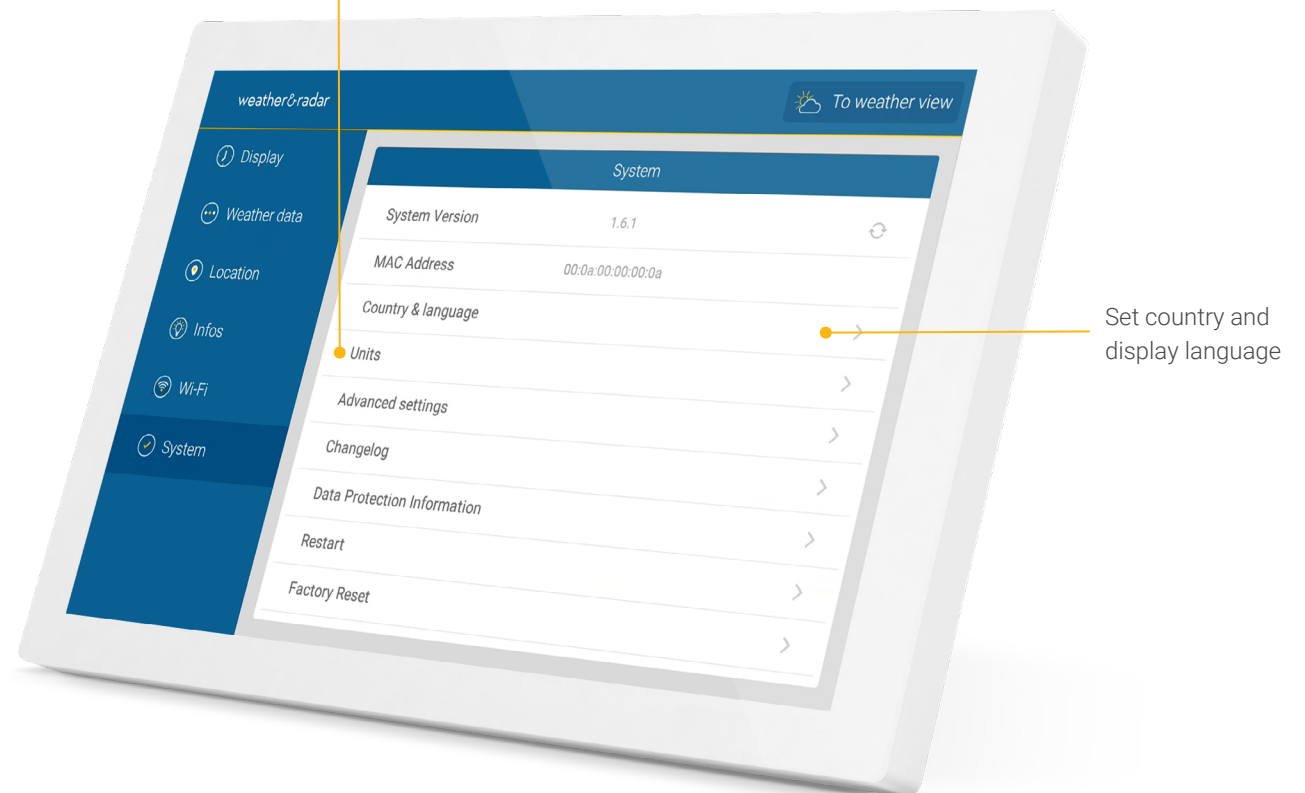



## Standby

Double-tap the display at any time to put the device into standby mode. To switch the device back on, simply touch the screen.

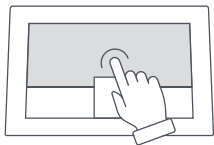


In the settings, under 'Display', you can define the time frame in which the device is supposed to be in Standby mode.

See also [page 10](#) for further information.



## Technical details

Display:	10,1 inch IPS
Screen resolution:	1280 x 800
Power supply:	AC adapter (included)
Connection:	USB-C
Cable length:	2 m (included)
Width:	250 mm
Height:	162 mm
Depth:	15 mm
Weight:	615 g

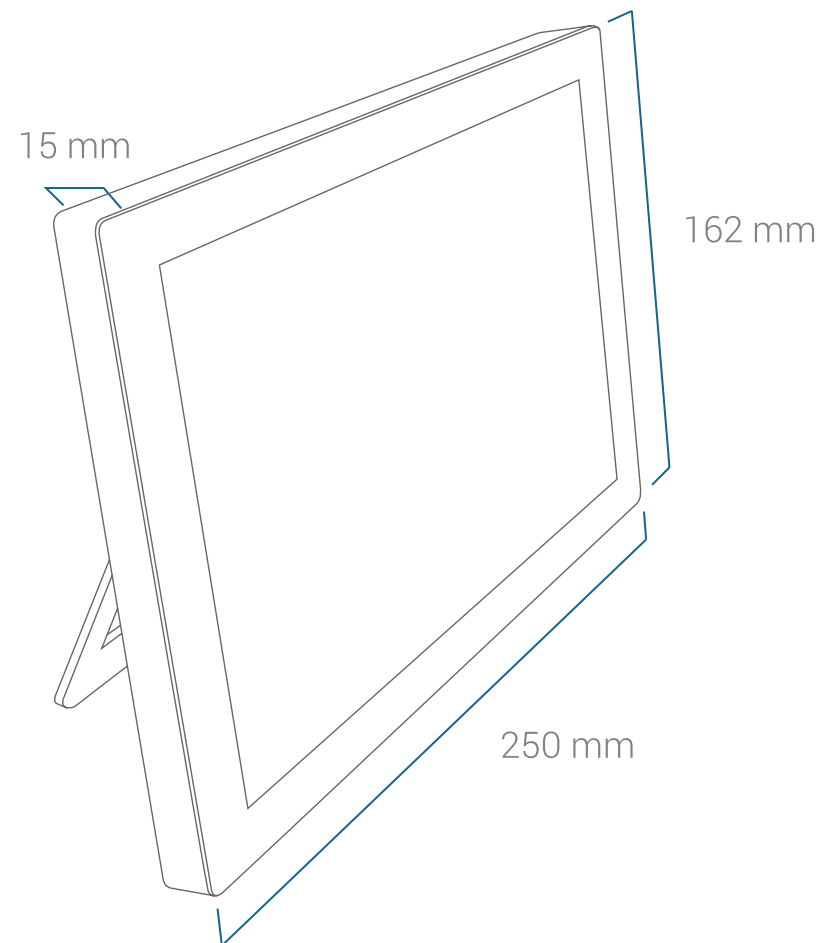

Note:  
Only 2,4 GHz Wi-Fi networks with WPA (2)- encoding are supported.

## How to perform a reset


In case of unexpected problems, where the factory reset cannot be performed via the menu, you can reset the device to factory settings as follows:

1. Unplug the cable from the back of the weather station
2. Place the station on a soft surface with the display pointing downwards.
3. Use a toothpick to gently push the reset button and hold after you hear a slight click. At the same time, plug the cable back into the back of the station and wait 10 seconds. Pull out the toothpick.
4. Set up the station. In the meantime, do not interrupt the power supply.

The display shows 'to be deleted'. The station then starts in the factory state and can be reconfigured.

### Tipp

If you need support or have further questions, please contact our service department at [home@weatherandradar.com](mailto:home@weatherandradar.com).

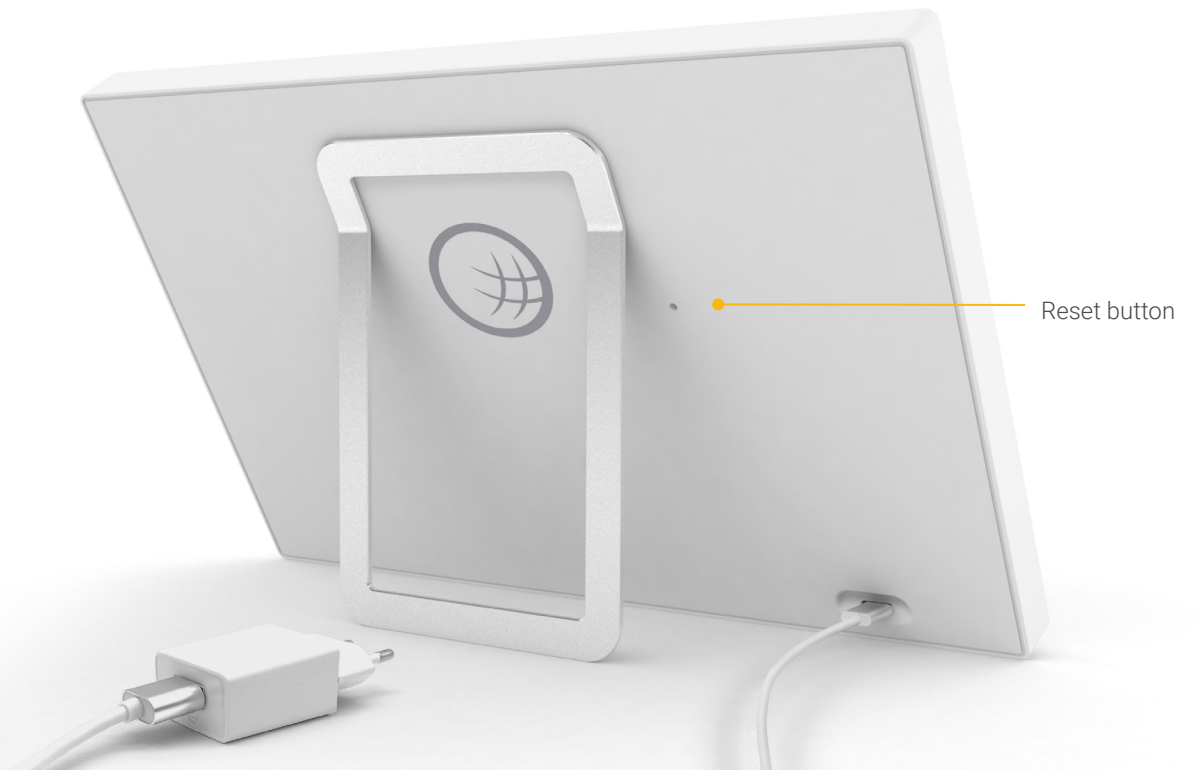

- The device should only be used in closed spaces with a surrounding temperature between +5 and +35 °C.
- Please keep away from heat sources (heaters, radiators, etc.) and do not expose to permanent direct sunlight.
- Avoid heavy shaking or dropping your device.
- In case of damage to the housing, cable, or the power supply unit, after leakage of liquids or in the event of an unusual noise or odor development, take the device out of service and do not operate it.
- Use only a soft dry or damp cloth for cleaning. Do not use cleaning products or detergents.
- The device is not a toy.
- Please only use the provided power supply unit (5V DC / 2A). This must be fully exposed at all times during operation and must not be covered.
- Please do not dispose of the device in regular garbage but take it to a collection facility for small electrical appliances.
- With the exception of the display film, the packaging can be completely disposed of as wastepaper.

### EU-Konformitätserklärung

Das Produkt wetteronline home ist mit allen maßgeblichen Harmonisierungsrechtsvorschriften der Europäischen Union konform. Der vollständige Text der EU-Konformitätserklärung ist unter [wetteronline.de/home/compliance](https://wetteronline.de/home/compliance) verfügbar.

### Manufacturer

wetteronline home  
 WetterOnline Meteorologische  
 Dienstleistungen GmbH  
 Karl-Legien-Str. 194a | 53117 Bonn  
[home@weatherandradar.com](mailto:home@weatherandradar.com)